
POST MEASUREMENT CHART: CAMBRIDGE

MEASUREMENT DIRECTIONS

Measure the actual width of your post and order according to the post size chart.



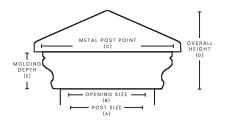

SKU	POST SIZE (A)	OPENING SIZE (B)	METAL POST POINT (C)	OVERALL HEIGHT (D)	MOLDING DEPTH (E)
CCC312	3-1/2"	3-5/8"	5-1/2"	3-3/8"	1-5/8"
CCC312512	3-1/2" x 5-1/2"	3-5/8 x 5-5/8"	6" x 8"	3-7/8"	1-5/8"
CCC334	3-3/4"	3-7/8"	5-1/2"	3-3/8"	1-5/8"
CCC4	4"	4-1/8"	6-3/4"	3-7/8"	1-5/8"
CCC46	4"x6"	4-1/8"x6-1/8"	6" x 8"	3-7/8"	1-5/8"
CCC412	4-1/2"	4-5/8"	6-3/4"	3-7/8"	1-5/8"
CCC434	4-3/4"	4-7/8"	6-3/4"	3-7/8"	1-5/8"
CCC5	5"	5-1/8"	6-3/4"	3-7/8"	1-5/8"
CCC512	5-1/2"	5-5/8"	8"	3-7/8"	1-5/8"
CCC534	5-3/4"	5-7/8"	8"	3-7/8"	1-5/8"
CCC6	6"	6-1/8"	8"	3-7/8"	1-5/8"
CCC612	6-1/2"	6-5/8"	9-1/2"	3-7/8"	1-5/8"
CCC7	7"	7-1/8"	9-1/2"	3-7/8"	1-5/8"
CCC712	7-1/2"	7-5/8"	9-1/2"	3-7/8"	1-5/8"
CCC8	8"	8-1/8"	11-1/2"	4-7/8"	1-5/8"
CCC812	8-1/2"	8-5/8"	11-1/2"	4-7/8"	1-5/8"
CCC9	9"	9-1/8"	11-1/2"	4-7/8"	1-5/8"
CCC912	9-1/2"	9-5/8"	11-1/2"	4-7/8"	1-5/8"
CCC10	10"	10-1/8"	11-1/2"	4-7/8"	1-5/8"