
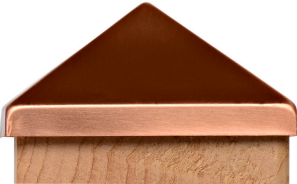


POST MEASUREMENT CHART: METAL POINT

MEASUREMENT DIRECTIONS
 Measure the **actual width** of your post and order according to the **post size** chart.

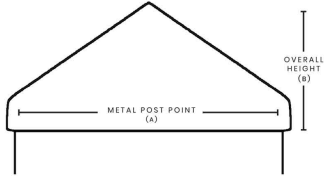

SKU	METAL OPENING (A)	OVERALL HEIGHT (B)
CT312	3-5/8"	1-5/8"
CT46	3-5/8"x5-5/8"	1-5/8"
CT512	5-1/2"	1-5/8"
CT634	6-3/4"	2-1/8"
CT68	6"x8"	2-1/8"
CT8	8"	2-1/8"
CT912	9-1/2"	3-1/8"
CT1112	11-1/2"	3-1/8"